



iHome iH5 Display Screen Replacement

Use this repair guide to replace the display screen on a iHome iH5.

Written By: Maggie Hill



INTRODUCTION

This is a guide to replacing a broken screen or logic board connected to the screen.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)


We used tweezers, but 8" Needle Nose Plier might work better for tight plugins

Step 1 — Display Screen




- Flip iHome iH5 over so bottom is facing up.
- Remove all eight of the screws with a #2 Phillips screwdriver.
- The eight screws are 5/16 inch screws.

Step 2

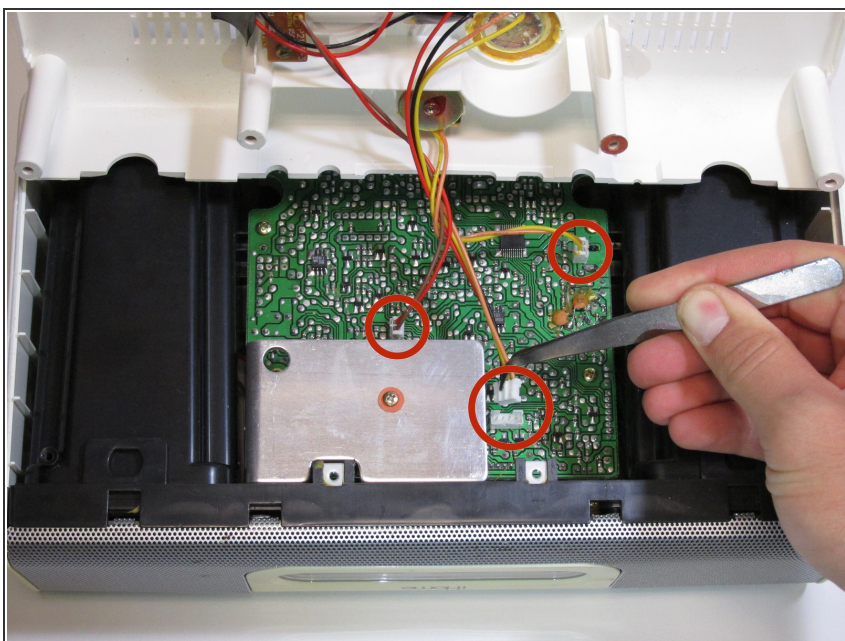



- Pull cover back to access the inside.
- Use tweezers (or pliers if wires are tight) to unplug the three wires.

Step 3

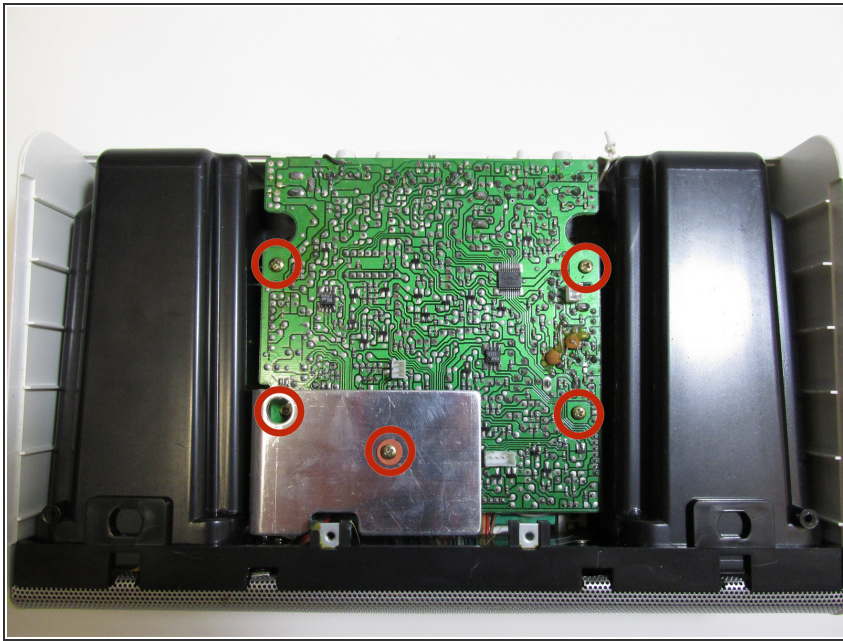

- Remove the five screws holding the circuit board down with a #2 Phillips screwdriver.
- The five screws are 5/16 inch screws.

Step 4

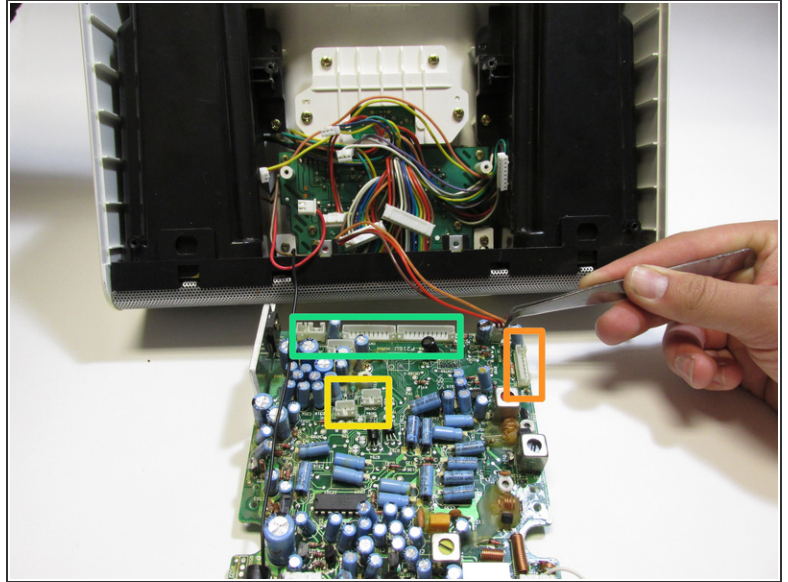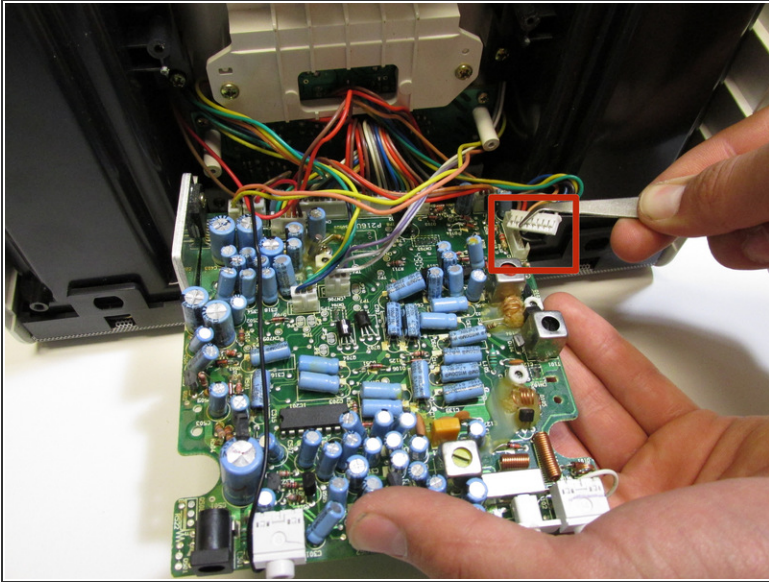


- Flip the circuit board over so back is facing out.

⚠ There are capacitors all over the back side of the board. Be careful not to touch these capacitors (blue cylinders) as they can discharge—giving you a shock.


- Remove the eight wires from the circuit board with tweezers. If the wires are tight 8" needle nose pliers might work better.
 - There is one wire to be removed in the orange box.
 - There are two wires to be removed in the the yellow box.
 - In the green box there are five wires to be removed.

Step 5

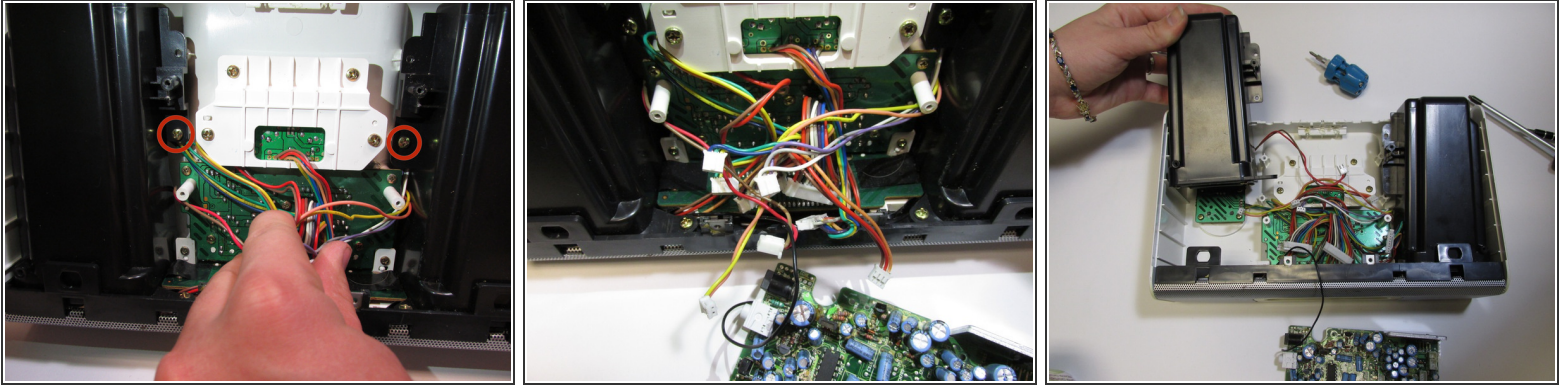


- Remove the two 5/16 inch screws from the speakers and the bottom of the device with a #2 Phillips screwdriver.
- Remove the two 5/16 inch screws from the speakers and the front of the device with a #2 Phillips screwdriver.
- Gently pull the back of the speaker up (like the speaker on the right side of the picture). Then pull it straight back (as shown with the speaker on the left side of the picture).

Step 6

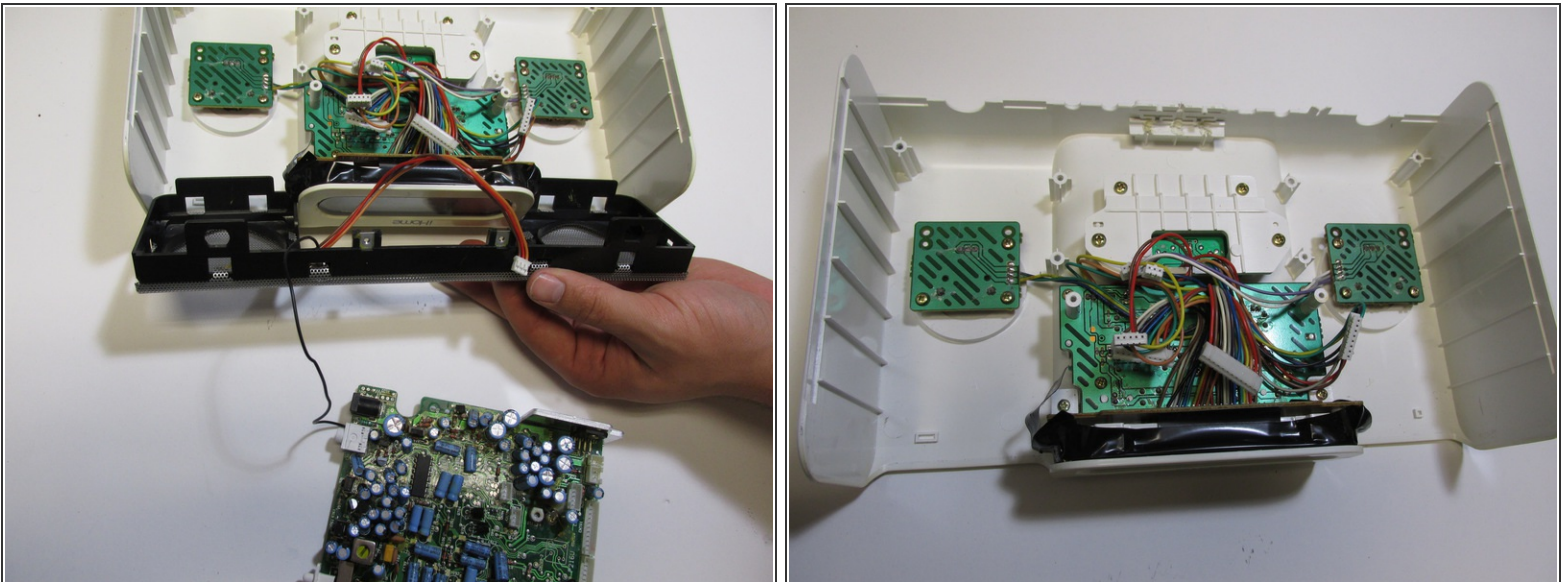


- Remove the black and silver front piece of the device.
- Pull it up until it hits plastic pieces sticking out from the screen display. Then pull it away from the device.

Step 7

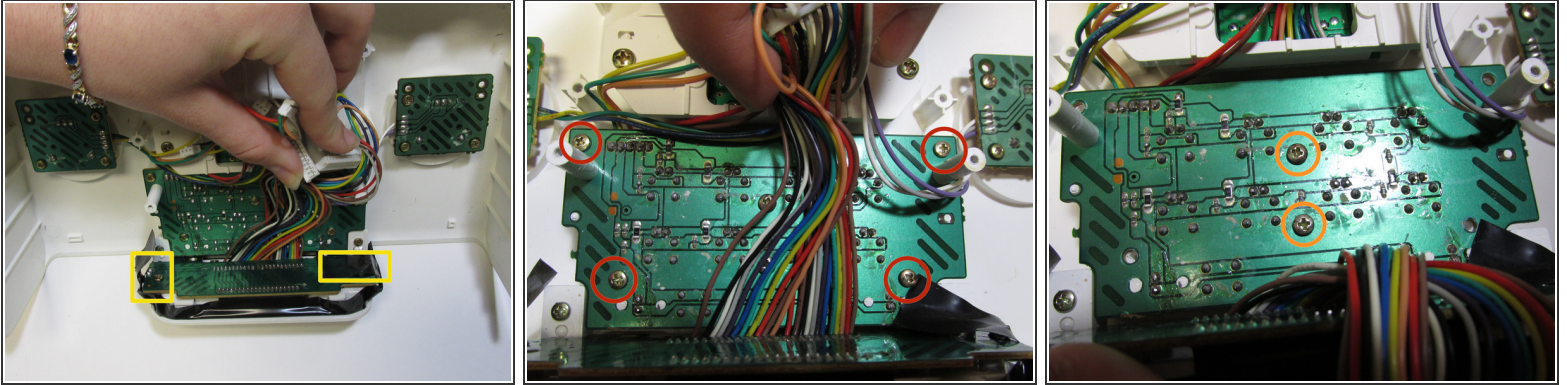



- Pull back the electron tape covering the two screws on the screen display and remove the 1/4 screws with #0 Phillips screwdriver
- Remove the six 3/8 inch screws from the circuit board with a #2 Phillips screwdriver.
 - There are four screws in the corners.
 - There are two screws in the middle (the wires have to be moved to see them).

Step 8

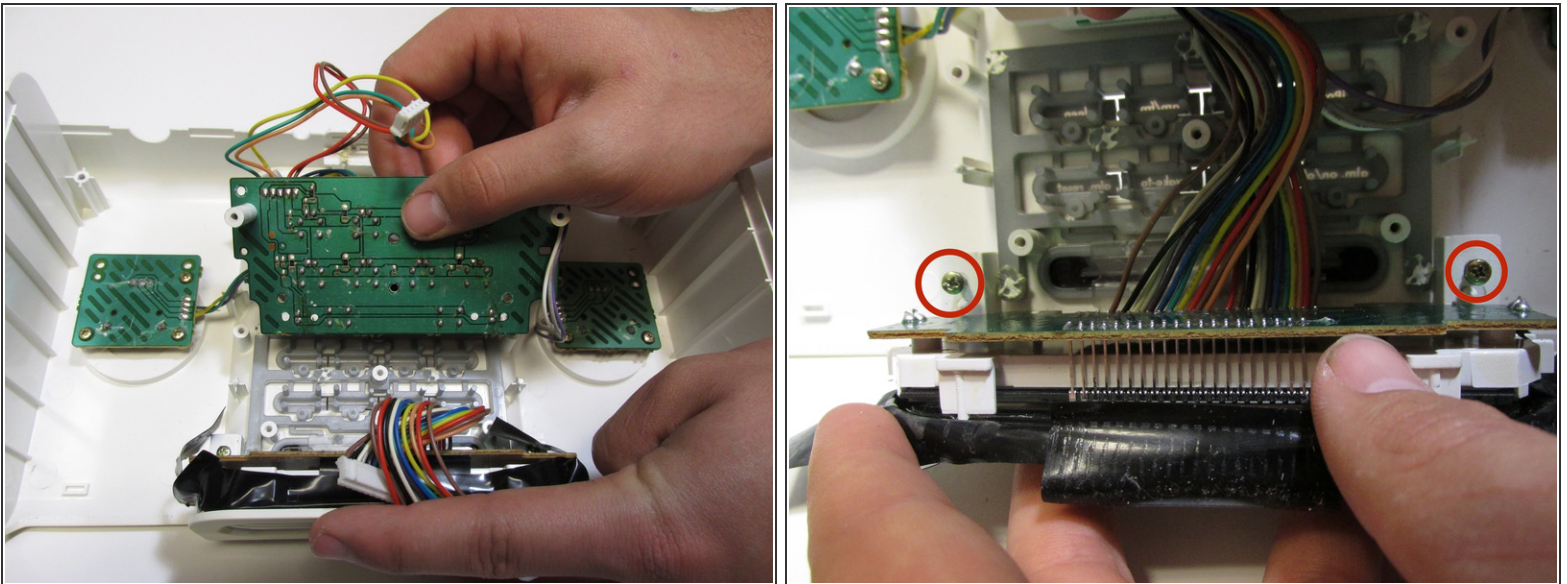

- Remove the circuit board by gently pulling it back and up out of the device.
- Peel back the electrical tape and move the wires out of the way.
 - Remove the two 5/16 inch screws that are now exposed with a #2 Phillips screwdriver.

Step 9

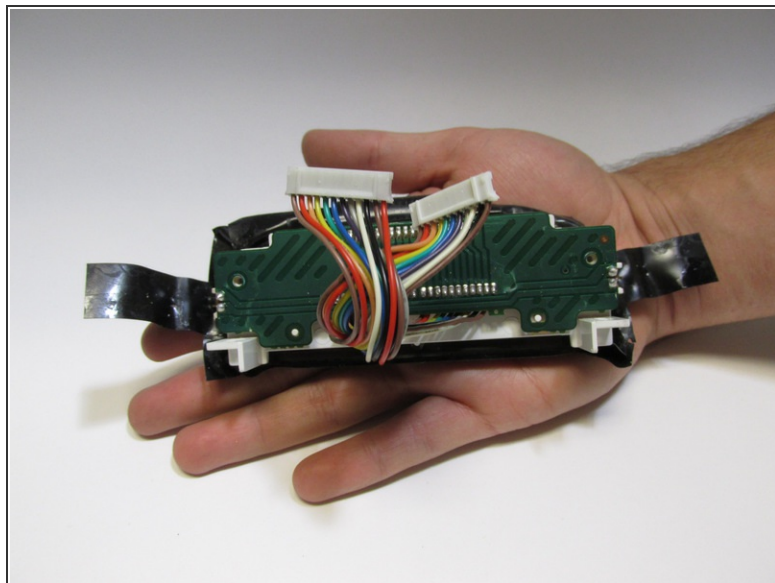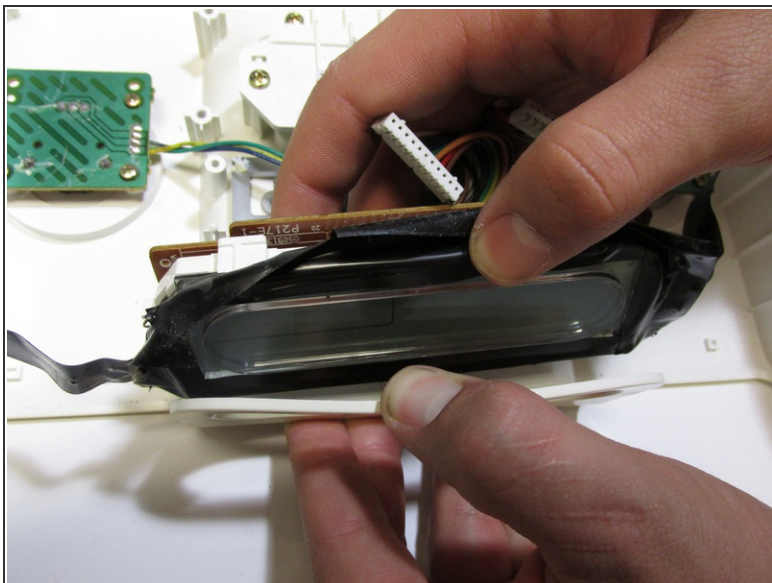

- Remove the screen display by placing one hand on the white framing and grabbing the screen and pulling in straight back.
- Replace the piece.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 05:50:29 PM.